

LIPI THERMAL UTS PRINTER INSTALLATION PROCEDURE

- ❖ Connect the **Serial Port** Cable from Thermal Printer to Thin Client Port (**COM 1**).
- ❖ Login procedure: After confirming Ticket Roll No. in UTS menu, select the option **“THERMAL SERIAL PRINTER Configured in system, want to change (Y/N) : Y”**
- ❖ Select: option No.4 (THERMAL SERIAL)
- ❖ THERMAL SERIAL PRINTER Configured in system. Want to CONFIRM (Y/N): **Y**.
- ❖ If the operator wants to change the printer type during the shift, if the Thermal/Dot matrix Printer fails due to any reason, select the **INSERT** key from the keyboard after going back to the UTS main menu: **“THERMAL SERIAL PRINTER Configured in system, want to change (Y/N) : y”**.